

3950 NW 120th Ave, Coral Springs, FL 33065 TEL 561-955-9770 FAX 561-955-9760 <u>www.nav-tv.com</u> <u>info@nav-tv.com</u>

SYNC AVSW

NTV-KIT224



Overview

The SYNC AVSW adds 2 additional audio and video inputs to any factory radio with a single audio/video input, while retaining any currently connected A/V source. The additional sources are triggered with 12v (+) separately.

Kit Contents



(2x)RCA-3.5mm Audio Cable NTV-CAB054



SYNC AVSW NTV-ASY170




Power/Trigger Harness NTV-HAR066



(3x) Barrel RCA connector NTV-CON018

AVSW Layout

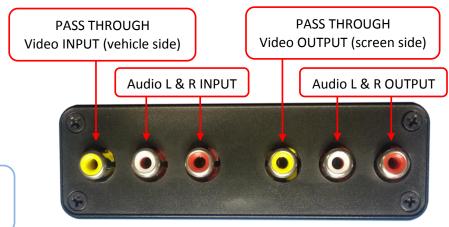


FACTORY A/V INPUT/OUTPUT SIDE

AUX A/V INPUT SIDE



AVSW Pin Out

Pin #	Description	Color
1	AV 1 Trigger (12v)	White/Blue
2	AV 2 Trigger (12v)	White/Red
6	Ground (-)	Black

 


Wire Side View



AVSW Signal Flow Scenarios


With no triggers connected (to 12v):

- A/V will pass normally from 'FACTORY'
 AV' to 'AV out'
- No LED's will emit.

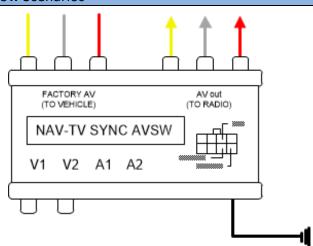


Supplying 12v (+) to AV1 trigger (Pin 1, White/Blue):

- A/V source from 'FACTORY AV' will be disconnected and source will be pulled from A1/V1 instead.
- LED 1 emits green.

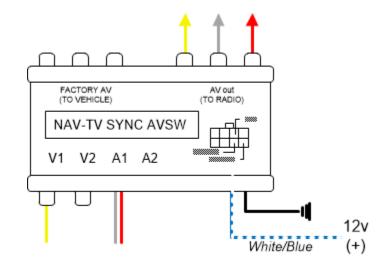

Supplying 12v (+) to AV2 trigger (Pin 2, White/Red):

- A/V source from 'FACTORY AV' will be disconnected and source will be pulled from A2/V2 instead.
- LED 2 emits green.

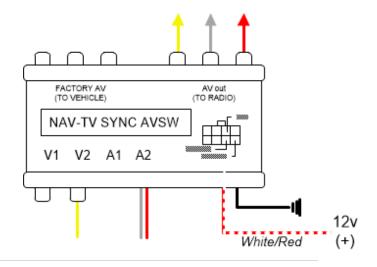

AVSW Installation

All information pertaining to connection is etched on top of the SYNC AVSW.

1. FACTORY AV (TO VEHICLE): Connects to the VEHICLE side of the NTV-KIT's T-Harness.

Yellow: Factory/Aftermarket Backup Camera.

Red: Right Audio output from car – i.e. RSE, AUX, USB White: Left Audio output from car – i.e. RSE, AUX, USB

2. AV out (TO RADIO): Output to RADIO side of the NTV-KIT's T-Harness.


Yellow: Video output directly to screen.

Red: Right Audio out to radio.


Left: Left Audio out to radio.

- 3. **V1:** Video input from external source 1 displayed when the **White/Blue** is triggered with 12v (+).
- 4. **A1:** (3.5mm jack) Audio input from external source 1 used when the **White/Blue** is triggered with 12v (+).
- 5. **V2:** Video input from external source 2 displayed when the **White/Red** is triggered with 12v (+).
- 6. **A2:** (3.5mm jack) Audio input from external source 2 used when the **White/Red** is triggered with 12v (+).


Whenever 12v (+) is present on either AV trigger (pin 1 or 2), audio/video from the factory system is isolated and signal is instead passed from AV1 or AV2.

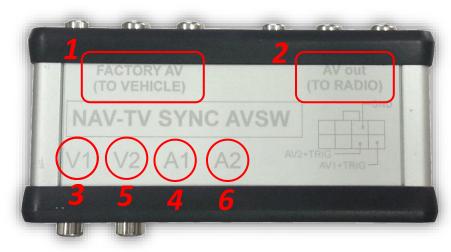



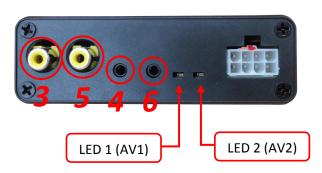

General Connection Diagram

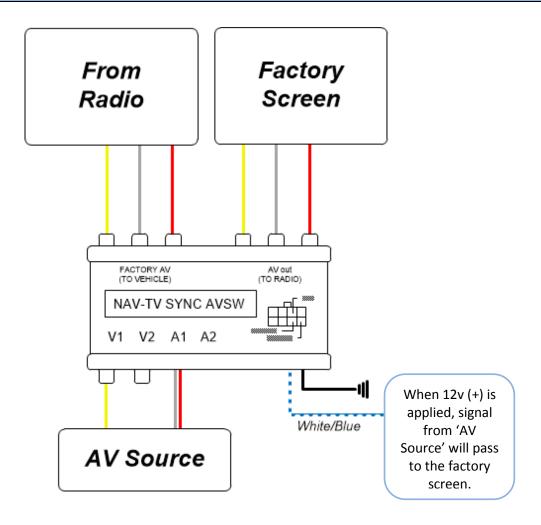



3950 NW 120th Ave, Coral Springs, FL 33065 TEL 561-955-9770 FAX 561-955-9760

