

www.nav-tv.com info@nav-tv.com





Overview

The VOLVO-CAM 15 interfaces up to 3 video inputs and a backup camera input (with dynamic guidelines) to the factory media screen in 2015+ Volvo XC60 & S60 vehicles. Audio integration requires that the vehicle have a factory audio input.



Agreement: End user agrees to use this product in compliance with all State and Federal laws. NAV-TV Corp. would not be held liable for misuse of its product. If you do not agree, please discontinue use immediately and return product to place of purchase. This product is intended for off-road use and passenger entertainment only.



# Dip Switch Settings\* Configure prior to installation

Dip SW:	1	2	3	4	5	6	7	8
UP	Enables	Enables	Enables	Enables	CAN	CAN	Factory or no Rev-	N/A
	RGB	V1	V2	V3	setting	setting	Cam	
DOWN	Skips	Skips	Skips	Skips	CAN	CAN	Activates	N/A
	RGB	V1	V2	V3	setting	setting	aftermarket Rev-Cam	





\*Note: If the dip switches are not configured prior to installation you must remove power to the unit prior to making adjustments to the dip switches.

Agreement: End user agrees to use this product in compliance with all State and Federal laws. NAV-TV Corp. would not be held liable for misuse of its product. If you do not agree, please discontinue use immediately and return product to place of purchase. This product is intended for off-road use and passenger entertainment only.

# VOLVO-CAM 15 Installation

# THIS INTERFACE INSTALLS AT THE RADIO, NOT AT THE SCREEN!

- 1. Remove the factory radio (disc drive) beneath the media screen.
- 2. Connect the provided *Plug & Play T-Harness* between the main radio connector and the radio itself.
- 3. Disconnect the factory blue GVIF cable from the radio, and connect the male end of the provided *GVIF video cable*.
- 4. Connect the free end (removed in step 3) of the factory video cable to the female side of the provided *GVIF video cable*.
- 5. Connect the white end of the *GVIF video cable* to the interface at the port labeled *'LVDS IN'*.
- 6. Connect the AV Input cable to the port on the VOLVO-CAM 15 interface *labeled 'AV IN/OUT'*.
  - a. If you're only connecting a reverse camera (and no other inputs), the signal input from the camera must connect to the RCA labeled '*REAR-C*'. Refer to the dipswitch settings chart to skip/enable AV sources upon toggle switch presses (optional, Page 2).
  - b. The interface provides *reverse* 12v (+) and ground (-) for powering your camera, if desired.
- 7. Adjust dip switches on the VOLVO-CAM 15 interface properly, refer to the chart on page 2 for qualifications.
- 8. Connect the white plug from the *Plug & Play T-Harness* to the port on the interface labeled '*POWER*'.
- 9. **Optional:** Connect the remote eye to the port labeled **'IR'** on the interface and leave it in clear view of the driver (often it can be stuck inside a vent). This connection would be necessary if you want to be able to adjust anything from the VOLVO-CAM 15 interface's menu.
  - a. While in any AV mode other than factory (on the display screen), press the MENU button for Menu 1, or hold the left arrow to enter MENU 2.
  - b. To switch between AV modes, press the 'OK' button.





- 10. Optional: Connect the provided momentary toggle switch to the port on the VOLVO-CAM 15 interface labeled 'MODE'. Pressing this switch with the ignition on will cycle the screen modes as follows: factory screen > NAVI (RGB) > AV1 > AV2 > AV3 > factory screen. Please refer to the dipswitch section on page 2 for input settings.
- 11. Start the car and test for proper functionality before replacing dash pieces.
- 12. **Note:** All other included harnesses not mentioned in this manual are not needed for most installations. If you would like to know more about the full capability of this interface, contact NAV-TV tech support at 561-955-9770. Additional features not mentioned in this manual are not supported by NAV-TV at this time.

# VOLVO-CAM 15 Operation

• Once all connections are made, placing the vehicle in reverse will display the connected reverse image automatically. *If an AUX video source was added to V1 RCA, press and hold the NAV button* to source to this video input (DIP switch 2 must be DOWN).



Agreement: End user agrees to use this product in compliance with all State and Federal laws. NAV-TV Corp. would not be held liable for misuse of its product. If you do not agree, please discontinue use immediately and return product to place of purchase. This product is intended for off-road use and passenger entertainment only.

#### Menu Adjustments

Before you start:

- Make sure the car's ignition is on and radio is booted/settled
- You must be in 'NAVI' (RGB), 'AV1', 'AV2' or 'AV3' mode (on display screen)
- Use the remote 'OK' button to switch modes, or use the provided input toggle switch
- Hold the LEFT ARROW for 3 seconds. The Menu of FACTORY will appear on screen.



Agreement: End user agrees to use this product in compliance with all State and Federal laws. NAV-TV Corp. would not be held liable for misuse of its product. If you do not agree, please discontinue use immediately and return product to place of purchase. This product is intended for off-road use and passenger entertainment only.

OK to Save

MENU to Return

OK to Save

SAFE ENABLE

MENU to Return

#### FAQs

# Q. I cannot switch A/V sources.

A. Check IR or toggle switch connection. Check the LEDs on the interface, if nothing is lit up with vehicle ignition, check power/ground connections.

# Q. All I see on the display is a black screen (no factory image pass-through).

A. Make sure the video cables (IN/OUT) are connected at the proper location (Screen/Radio/NAV DRIVE).

B. Make sure the video cables are seated all the way.

C. Make sure Dip Switches 5 & 6 are set correctly (resolution or screen size).

#### Q. Displayed image color is not proper (too dim or color seems wrong).

A. Try to select 'INITIAL' in OSD menu.

#### Q. Rear camera image does NOT appear.

A. Make certain Dip Switch #7 in set **down** for aftermarket camera, or **up** for a factory camera.

B. Try swapping the CAN connection wires. This will not do damage, if it is hooked up wrong it will only not work.

C. Make certain the camera is properly powered. Check voltage at the camera itself.

D. Try an alternative video source, don't assume the power/ground is correct unless you've checked it *with a multi-meter!* 

E. If this is a CAN-connected module and you've connected the CAN wires, try using the gray wire (*not all interfaces have this wire!*) instead of the CAN connection for reverse activation. You'll also need to change the *Rear Select* option in the *Menu of Factory (MENU 2)* under *UTIL* or *PARK*. Refer to the *Menu Adjustments* section.

# Q. Unwanted A/V mode is displayed upon a toggle press (A/V source switching order: OEM->RGB->AV1->AV2->AV3->OEM).

A. Check DIP Switch Setting. Refer to page 2.