



Ford A<sup>2</sup>B to 12-channel Analog & Digital sound processor





WARNING: Do not connect any RCA cables to the ZEN-A2B interface or additional processors prior to properly grounding aftermarket amplifier(s)!

#### Overview

The ZEN-A2B processor seamlessly converts 2018+ Ford factory A²B (Automotive Audio Bus) to 12-channel analog RCA and TOSLink output. Adding aftermarket amplifiers to the OE B&O or Revel amplified SYNC3 system has never been so simple and seamless. This kit integrates with the OEM A²B bus to retain volume control, full fade and balance (analog only), treble, mid-range, bass control & Bluetooth voice calls with no external speaker (true OEM integration). NOTE: 2018 vehicles not equipped with a factory B&O or Revel amplified system are not equipped with A²B bus and do not require this interface.









NTV-ASY272





#### ZEN-A2B overview

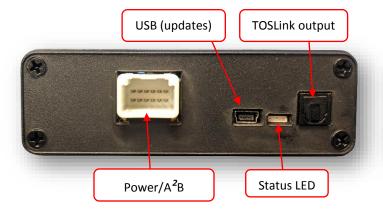

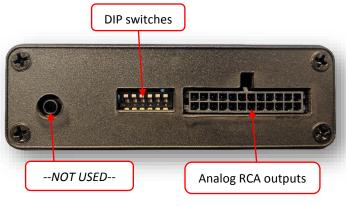

### ZEN-A2B Compatibility SYNC3)

NOTE: All vehicles require SYNC3, this interface only applies to vehicles equipped with A<sup>2</sup>B (B&O or Revel Amplifiers)

Year(s)	Make	Model	NOTE:
2017	Ford	F150, Escape	With B&O or Revel amp
2018	Ford	F150, Escape, Expedition	With B&O or Revel amp

#### **ZEN-A2B Installation**

- 1. For ZEN A<sup>2</sup>B installations, the factory amplifier must be removed and the ZEN-A2B can be installed into its place. If this vehicle is not amplified from factory then this interface is not needed.
- 2. After locating the factory amplifier, disconnect it entirely as it will no longer be in use. Connect the following wires to the vehicle (wires can be found at the amplifier connectors):

Pin #	Description	Color	Connect to	Amplifier PIN #	
4	CAN LO	Violet	Amp (gray connector)	11 (white/green)	
5	CAN HI	Violet/White	Amp (gray connector)	1 (green/blue)	
6	Ground (-)	Black	Amp (black connector)	1 (black/violet)	
7	A <sup>2</sup> B (pos)	Green	From USB connector	N/A	
8	A <sup>2</sup> B (neg)	White	From USB connector	N/A	
11	Remote Output	Blue	Aftermarket Amp remote	N/A	
12	Constant 12v (+)	Yellow	Amp (black connector)	4 (brown/red)	



(HAR318)

3. Connect the *blue* wire to the remote input on the amplifier\*.

\*Remote wire note: the ZEN-A2B (green LED) will turn on after the car is unlocked, but the blue remote wire will not output until the key and radio are ON.

4. Adjust dip-switch settings for the desired options:

	Time Alignment	Attenuation TOSLink DownMix*		Loudness	Vehicle Settings	
Position	DIP 1	DIP 2 DIP 3		DIP 4*	DIP 5	DIP 6
UP (off)	Front Row	Full Scale output (0 dB)	N/A	Loudness OFF	OFF	OFF
DOWN (on)	Driver Focused	-12 dB output	N/A	Loudness ON	OFF	OFF

5. If using analog RCAs for signal to the amplifier, connect according to the reference chart below. WARNING: Do not connect RCA cables to this interface until all amplifiers/external processors are properly grounded. Failure to do this may cause damage to the interface and VOID the warranty!

1	2	3	4	5	6	7	8	9	10	11	12
Left	Right	Left	Right	Left	Right	Left Rear	Right Rear	Left Rear	Right Rear	Center	Sub
Front	Front	Front	Front	Front	Front	Door	Door	Center	Center		

6. If using TOSLink for signal to the amplifier, connect the cable to the TOSLink port shown on page 2. NOTE: both Analog and Digital output sound simultaneously, regardless of which type is used.

<sup>\*</sup>This remote wire <u>must</u> be used for aftermarket amplifier remote for proper functionality. **If installing more than one** amplifier/DSP, a relay must be used for reliable turn-on (500mA max).

#### **ZEN-A2B General Installation Notes**


## • Tuning tips:


- 1. Before beginning tuning process (especially with external EQ/Processors), set Bass & Treble on the head unit <u>for each source</u> to flat (0).
- 2. Begin with amplifier/EQ gains all the way down.
- 3. With dynamic music playing, adjust the radio volume to <u>maximum</u>.
- 4. Adjust the amplifier/EQ gains to desired maximum level.
- From the factory, some vehicles' audio will *attenuate* when in reverse. Simply set the 'reverse volume' to desired level while in reverse to adjust this. The ZEN-A2B will retain this method. The same is true for NAV guidance audio and BT voice calls.

#### Multi-Color LED Status Indication



LED Status	Indication
Solid Red	MOST Active
Violet	MOST traffic commands
Blinking Red	Peaking (maximum digital signal level achieved)
Blinking Blue	PC Link with app (future use)
Green	The LED remains lit for ~3 min after exiting and
	locking vehicle (normal operation)

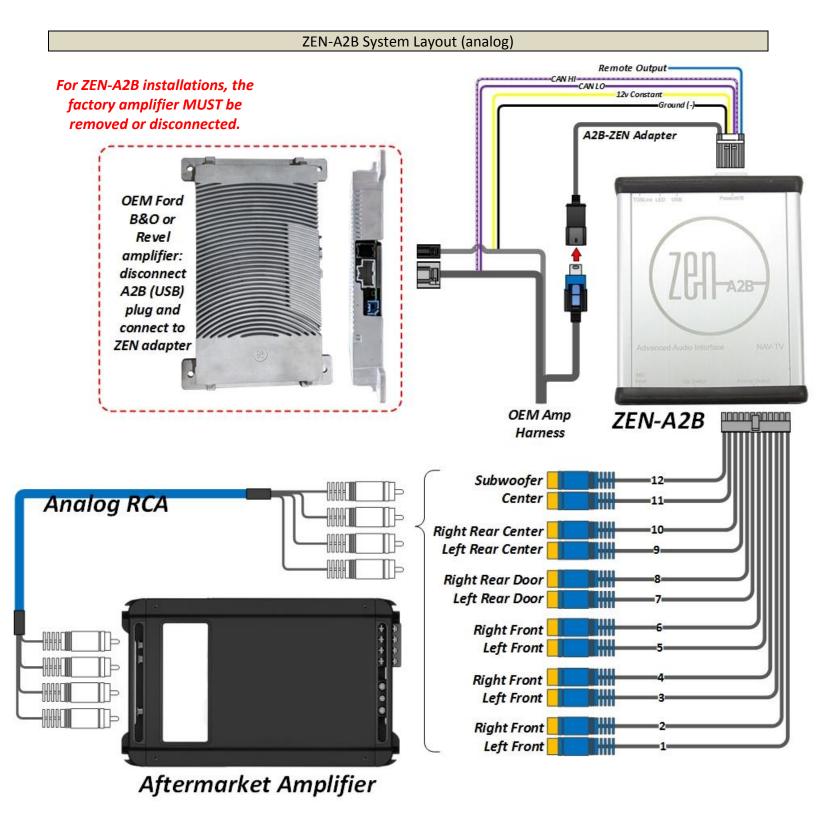

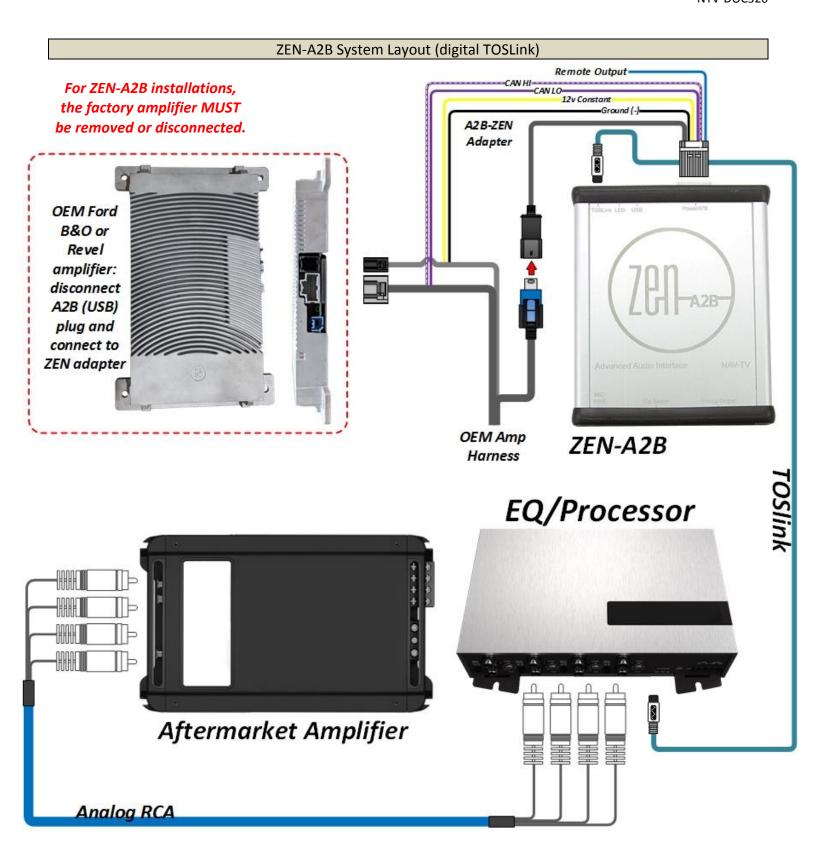

# ZEN-A2B Technical Specifications

Hardware & Software					
Current HW version:	1r0				
Current SW version:	ZEN-A2B-1.2.19-5-4-18.enc				
Compatible SW (update) OS:	Windows 7 (64 bit), 8, 10				
	INPUT				
Digital Input	A <sup>2</sup> B Twisted Pair				
	OUTPUT				
Digital Outputs:	TOSLink				
Digital Outputs supported:	24bit/48kHz				
Frequency Response (digital):	18Hz – 24kHz				
Analog Outputs:	12 channels (RCA)				
Output Voltage <i>Peak:</i>	6v				
Output Voltage RMS:	2.1v				
Analog Output Type:	Single-Ended				
S/N Ratio (analog):	114dB				
Frequency Response (analog):	18Hz – 24kHz				
THD+N @ -1dBFS	-94dB				
DAC	48kHz 32bit				
DSP	128bit Floating Point				
Delay (Time Alignment)	Selectable				
Power Supply					
Current Consumption Stand-by	<1 mA				
Current Consumption Operational	350 mA MAX				
Operational Voltage	7V – 20V DC				
Amp Turn-On Output	Automatic				
Amp Turn-On Voltage	V-batt				
Amp Turn-On Current Limitation	500mA				
Other Other					
Dimensions:	4"x5"x1 3/8"				
Weight:	10 oz				
Country of Origin:	USA				

# NAV-TV



