NAV-TV
INTERFACING THE FUTURE
3950 NW 120th Ave, Coral Springs, FL 33065 TEL 561-955-9770 FAX 561-955-9760

ZEN AUDIO

DSP12A-A2B

Ford A²B® to 12-channel Analog & Digital sound processor

NTV-KIT889

A²B® is a registered trademark of Analog Devices Inc.

WARNING: Due to the complexity and sensitivity of the OEM Ford A²B®, the ZEN-A2B must be used with amplifiers that are grounded directly to the battery. The resistance to (true battery) ground of the Amplifier(s) *must not exceed 1 ohm, otherwise you will likely experience performance issues or damage the ZEN-A2B*.

Overview

The ZEN-A2B processor seamlessly converts 2018+ Ford factory A²B® (Automotive Audio Bus) to 12-channel analog RCA and TOSLink output. Adding aftermarket amplifiers to the OE B&O or Revel amplified SYNC3 system has never been so simple and seamless. This kit integrates with the OEM A²B® bus to retain volume control, full fade and balance (analog only), treble, mid-range, bass control & Bluetooth voice calls with no external speaker (true OEM integration). *NOTE: 2018 vehicles not equipped with a factory B&O or Revel amplified system are not equipped with A²B® and do not require this interface.*

Kit Content

ZEN RCA Harness
NTV-HAR315

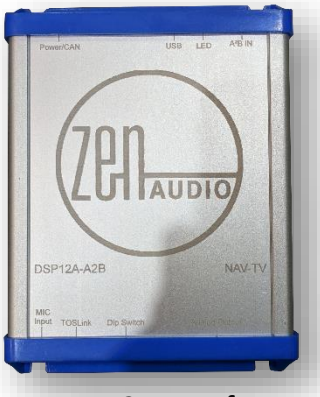

ZEN-A2B Interface
NTV-ASY274

ZEN-A2B Harness
NTV-HAR325

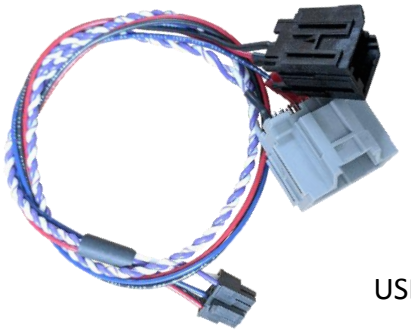

USB Cable (updates)
NTV-CAB009

DSP12A-A2B overview

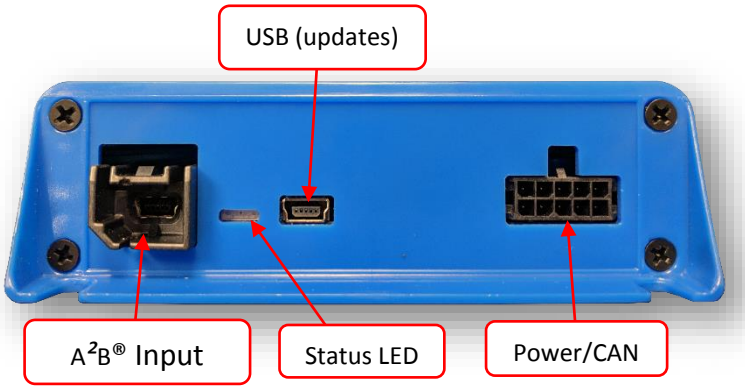

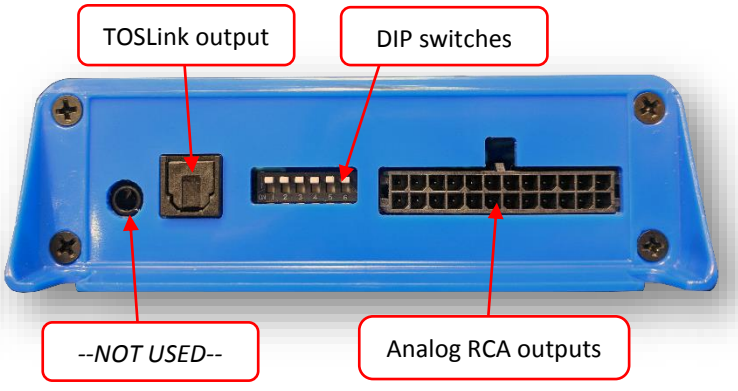

DSP12A-A2B Compatibility (SYNC3)

NOTE: All vehicles require SYNC3, this interface only applies to vehicles equipped with A²B® (B&O or Revel Amplifiers)

Year(s)	Make	Model	NOTE:
2017+	Ford	F150, Escape, Raptor	With B&O
2018+	Ford	Expedition	With B&O

A²B® is a registered trademark of Analog Devices Inc.

DSP12A-A2B Installation

1. For ZEN-A2B installations, the factory amplifier must be removed and the ZEN-A2B can be installed into its place. If this vehicle is not amplified from factory then this interface is not needed.

2. After locating the factory amplifier, disconnect it entirely as it will no longer be in use. With the vehicle off, connect the provided ZEN-A2B harness to the (previously removed) OEM amplifier connectors (gray & black). Below is a pin out chart (just for reference):

3. Connect the OEM *A*²B® (USB) connector removed from the OEM amplifier to the ***A2B IN*** port on the ZEN-A2B.

Pin #	Description	Color
1	Ground (-)	Black
2	Remote Output	Blue
5	CAN HI	Violet/White
6	Constant 12v (+)	Yellow
10	CAN LO	Violet

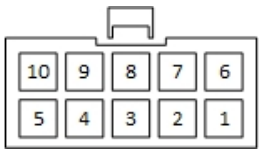

Wire Side (HAR325)

4. Connect the ***blue*** wire (PIN 2) to the remote input on the amplifier*.

**If installing more than one amplifier/DSP, a relay must be used for reliable turn-on (ZEN remote output: 500mA max).*
**Remote wire note: the (blue) remote wire will output 12v as soon as CAN wakes (door opens, etc).*

5. ***For ZEN modules with 3.0.12 firmware and up (units built past 09/16/18), the dip switches are no longer used. Use the ZEN online configuration tool to adjust tone levels, fader, etc. See pages 7-8 for more information on this tool. Open a browser and type in zen.local/. Connect via the USB to adjust desired settings***

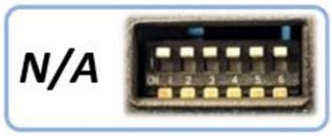

6. If using analog RCAs for signal to the amplifier, connect according to the reference chart below.
WARNING: Do not connect RCA cables to this interface until all amplifiers/external processors are properly grounded. Failure to do this may cause damage to the interface and VOID the warranty!

RCA	1	2	3	4	5	6	7	8	9	10	11	12
Channel	Left Front	Right Front	Left Front	Right Front	Left Front	Right Front	Left Rear Door	Right Rear Door	Left Rear Center	Right Rear Center	Center	Sub

7. If using TOSLink for signal to the amplifier, connect the cable to the TOSLink port shown on page 2.
NOTE: both Analog and Digital output sound simultaneously, regardless of which type is used.

DSP12A-A2B General Installation Notes

- ***Tuning tips:***
  1. Before beginning tuning process (especially with external EQ/Processors), set Bass & Treble on the head unit <u>for each source</u> to flat (0).
  2. *Begin with amplifier/EQ gains all the way* ***down.***
  3. *With dynamic music playing, adjust the radio volume to <u>maximum</u>.*
  4. *Adjust the amplifier/EQ gains to <u>desired maximum</u> level.*

A²B® is a registered trademark of Analog Devices Inc.

Multi-Color LED Status Indication

LED Status	Indication
Solid Red	A²B Active
Solid Green	CAN Active
Green + Red (yellow)	A²B + CAN Active
Blue/Violet/White	Amp command
Blinking Red	*Clipping* (beyond maximum digital signal level achieved)
Blinking Blue	PC Link via USB (updates)

OEM Ford B&O amplifier connector pin out

Pin #	Description	Color
1	CAN HI	Green/Blue
4	Center Channel (-)	Gray/Yellow
5	Subwoofer COIL 1 (-)	Gray
6	Right Front Door (-)	White/Orange
7	Left Front Door (-)	White/Brown
8	Right Rear Door (-)	Brown/Blue
9	Subwoofer COIL 2 (-)	Yellow
10	Left Rear Door (-)	Brown/Yellow
11	CAN LO	White/Green
14	Center Channel (+)	Green
15	Subwoofer COIL 1 (+)	Green/Violet
16	Right Front Door (+)	White/Violet
17	Left Front Door (+)	White
18	Right Rear Door (+)	Brown/White
19	Subwoofer COIL 2 (+)	Violet/Orange
20	Left Rear Door (+)	White/Green

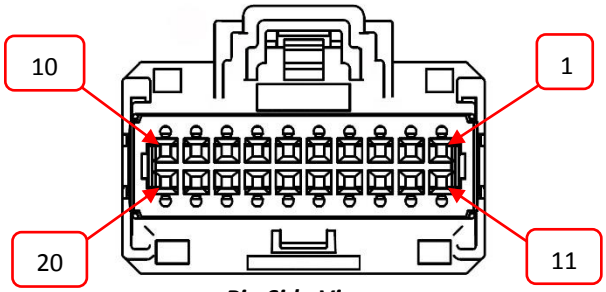

Pin Side View

Pin #	Description	Color
1	Ground (-)	Black/Violet
2	*--Not Used--*	--
3	*--Not Used--*	Brown
4	Constant 12v (+)	Brown/Red
5	Ground (-)	Black/Violet
6	*--Not Used--*	--
7	*--Not Used--*	--
8	Constant 12v (+)	Brown/Red

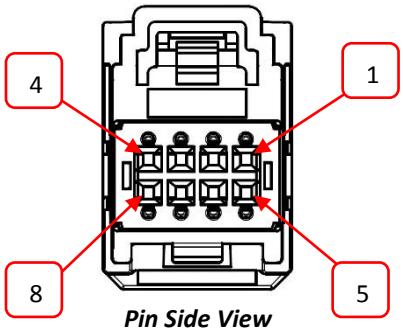

Pin Side View

DSP12A-A2B System Layout (analog)

For ZEN-A2B installations, the factory amplifier MUST be removed or disconnected.

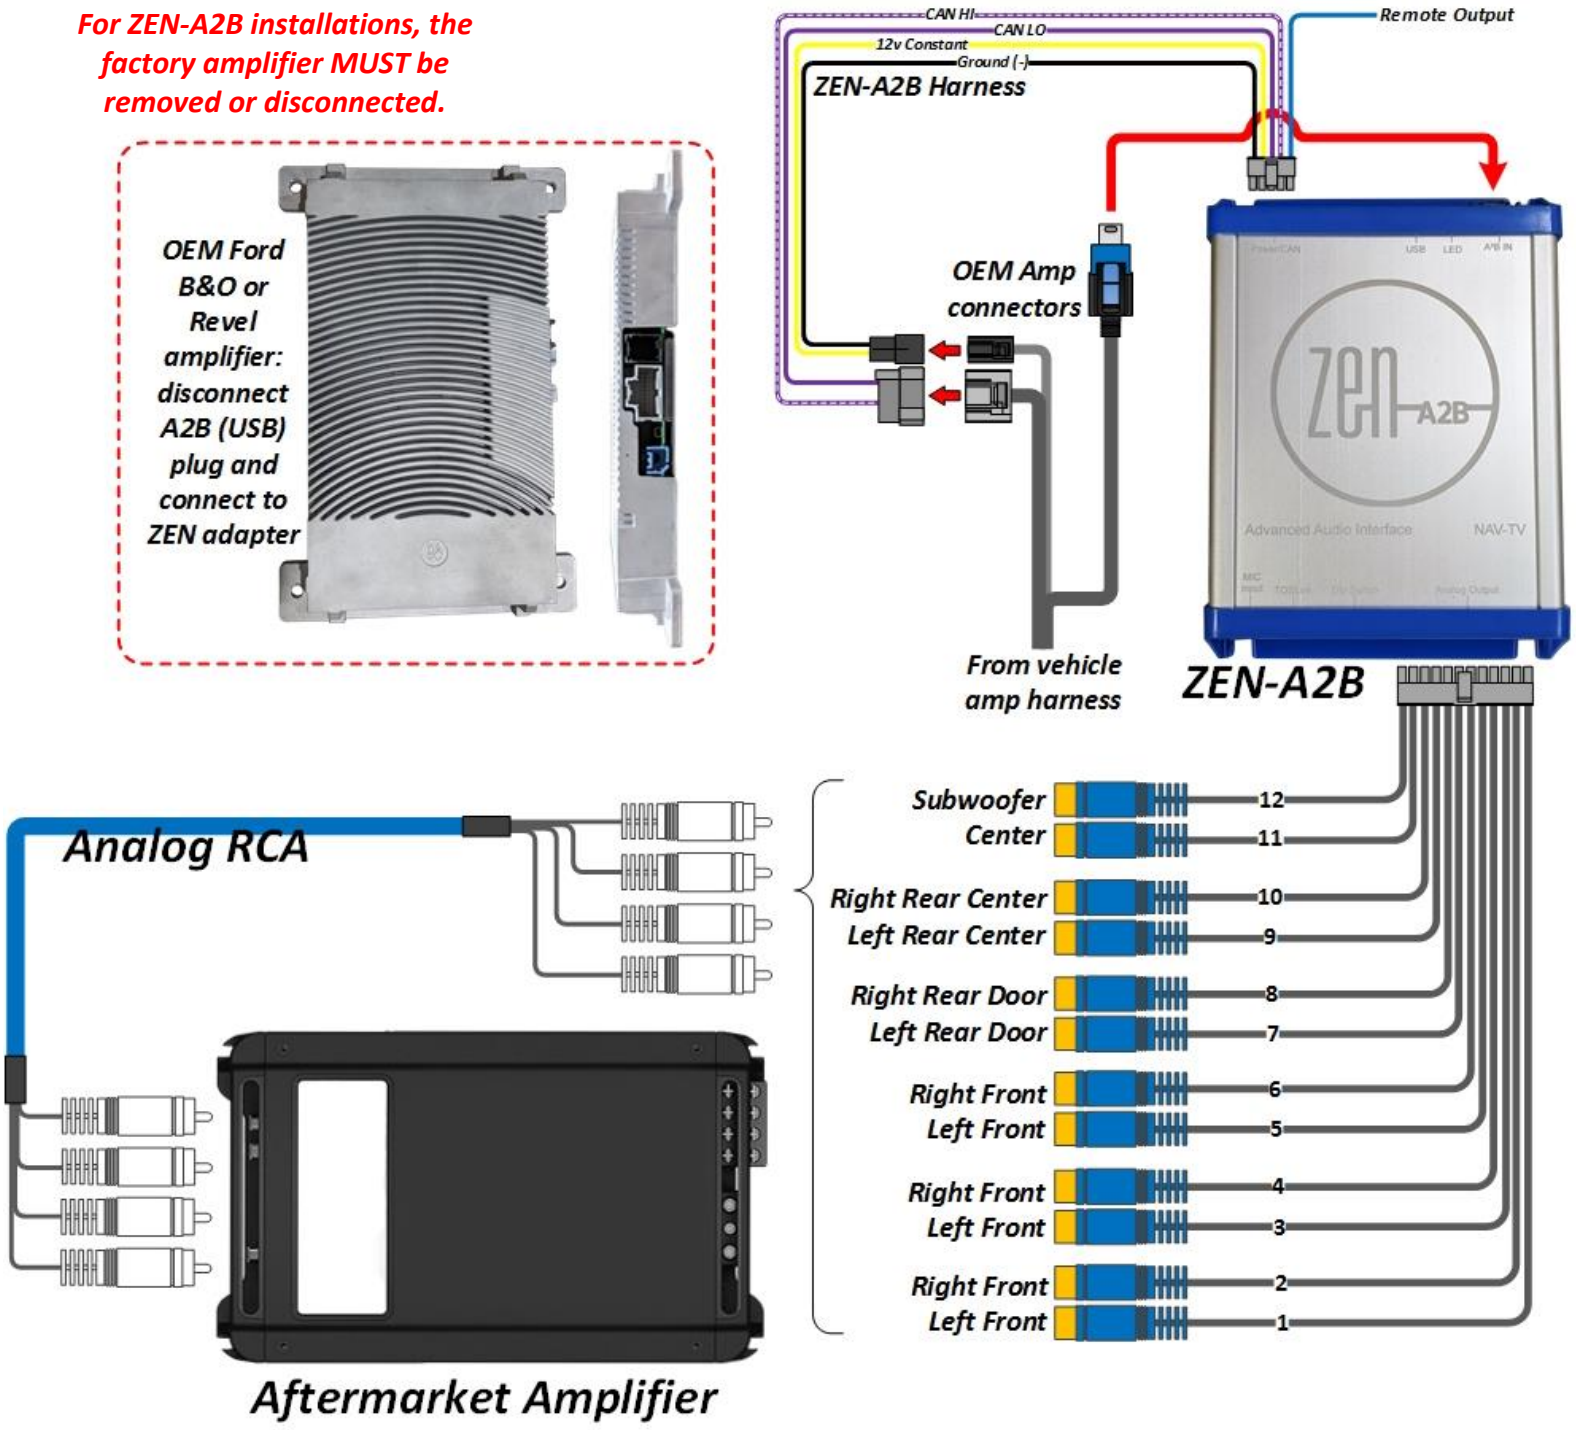

A²B® is a registered trademark of Analog Devices Inc.

DSP12A-A2B System Layout (digital TOSLink)

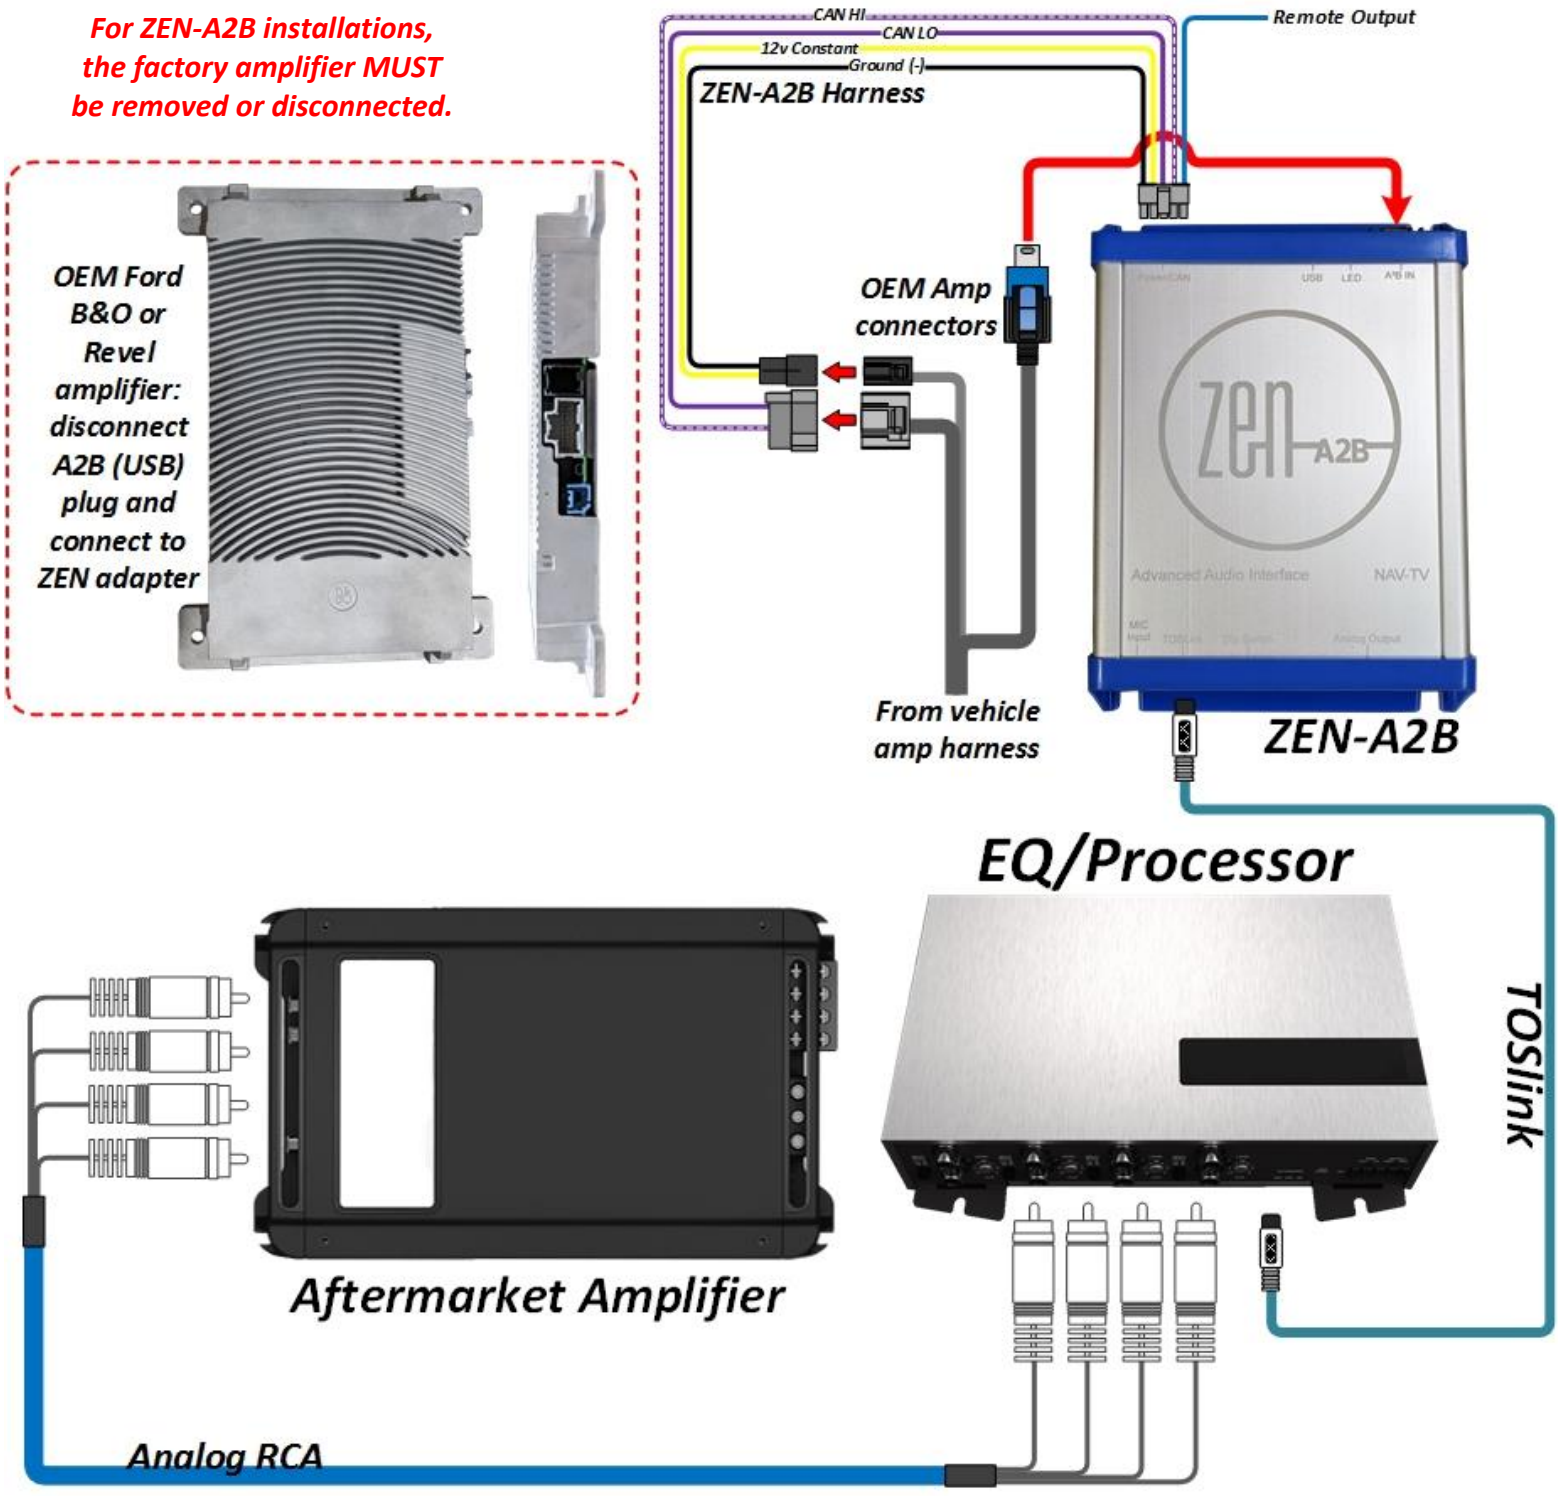

ZEN configuration: Analog Outputs (online tool)

To access the ZEN online configuration tool, first connect the provided USB cable to the ZEN module, and to the PC. Open an internet browser and navigate to ***zen.local/*** (forward slash must be present). Wait for the configuration page to load. Adjust settings as required for the installation.

NOTEs:

- *Default values for the ZEN module are shown below (Tones Mix on ALL: 20%, Phone Mix on front only: 100%)*
- *If the ZEN module is still connected to the vehicle while configuring via the web-tool, a door chime will be generated and repeated 4 times upon adjustment. To test Phone Mix level without a phone connected, go to SETTINGS, BLUETOOTH, then select 'Add a Bluetooth Device'. Selecting this emits an audible OEM message and will be an equivalent level to typical BT phone volume.*

Strip Audio sends only door chimes/ safety alerts out on that RCA channel (removes all music). If music must play through the channel, you must use ***Tones Mix***. Adjust tone output level to suit. *NOTE: this setting CANNOT be used simultaneously with 'Tones Mix'.*

Tones Mix will play audio normally until a door chime or other safety alert is requested, at which time the tone will be heard along with the audio on that channel. Adjust tone output level to suit.

Phone Mix will play audio normally until a Bluetooth phone call is received/active, at which time the audio will *MUTE* and BT phone call will be output on that channel. Adjust phone output level to suit.

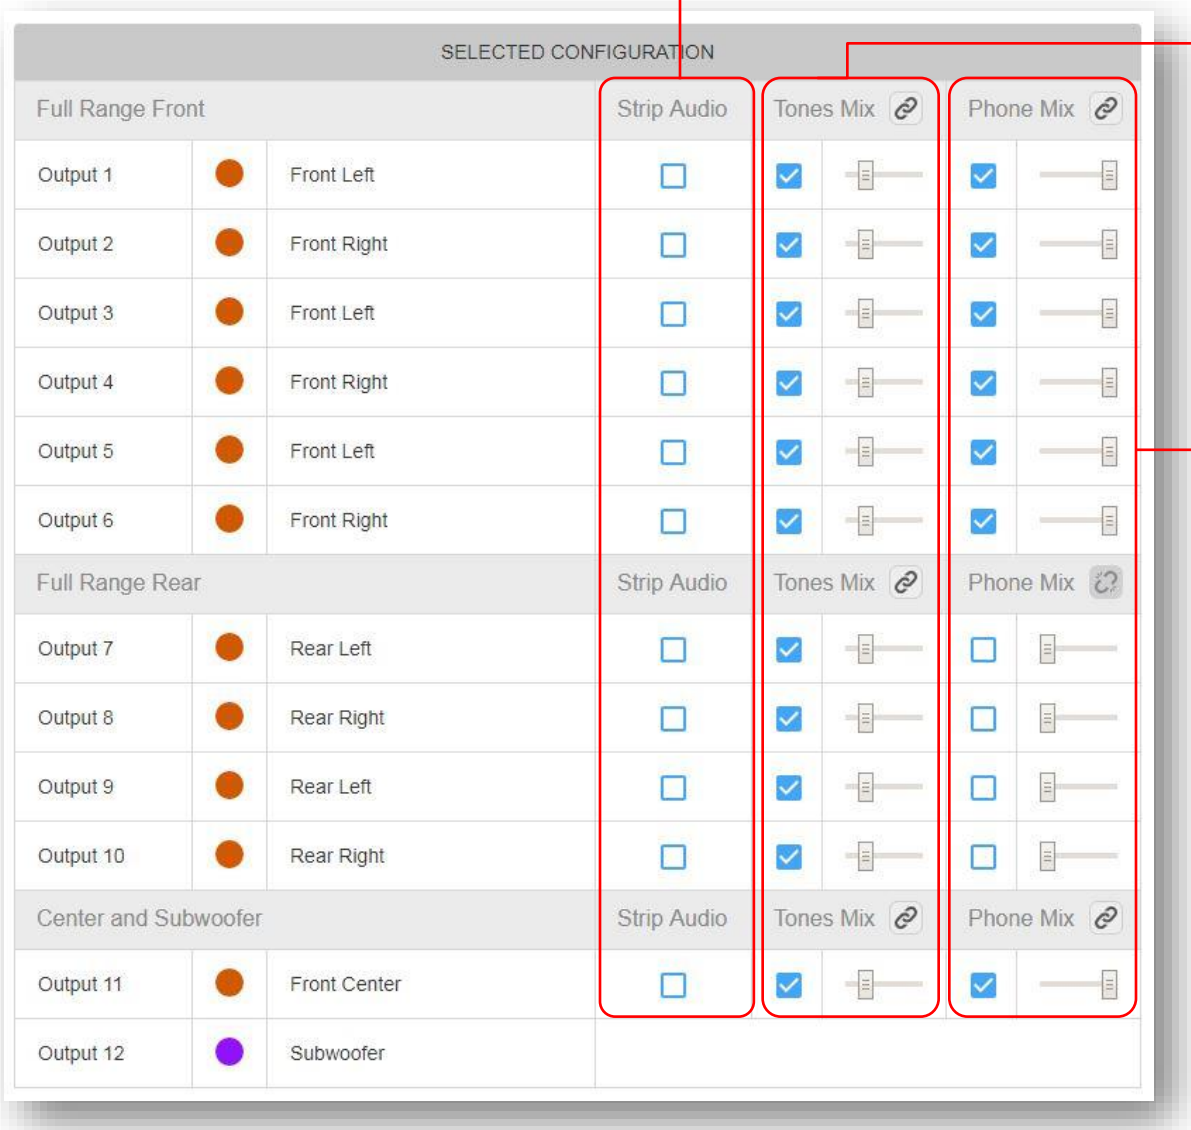

Use the ***LINK*** button to simultaneously adjust all the levels (for front & front center, or rear). Select, then adjust the slider to suit.

Use the ***UNLINK*** button to separately adjust each channel level. Select, then adjust the slider to suit.

A²B® is a registered trademark of Analog Devices Inc.

ZEN Configuration: Digital Output (online tool continued)

Since the digital TOSLink is a single stereo output, advanced adjustments are limited.

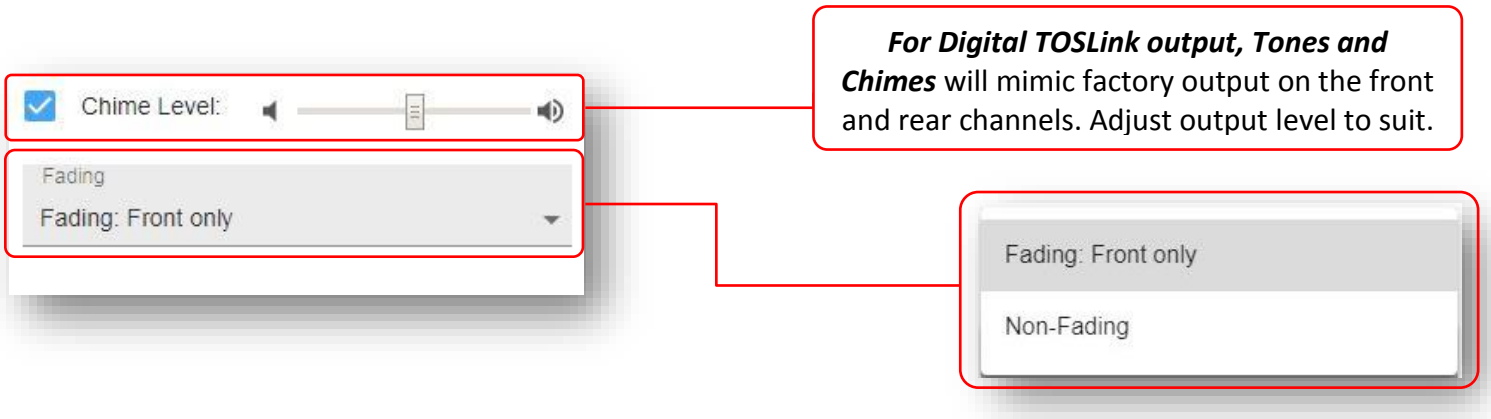

For Digital TOSLink output, Tones and Chimes will mimic factory output on the front and rear channels. Adjust output level to suit.

*Once complete, select **SAVE** to store the settings in the ZEN module.*

ZEN Configuration: GLOBAL Adjustments (online tool continued)

- Adjust global ***Output Level*** (attenuation) to desired level.
- Adjust ***Loudness Off or On***.
- Adjust global ***Phone Gain*** if required.

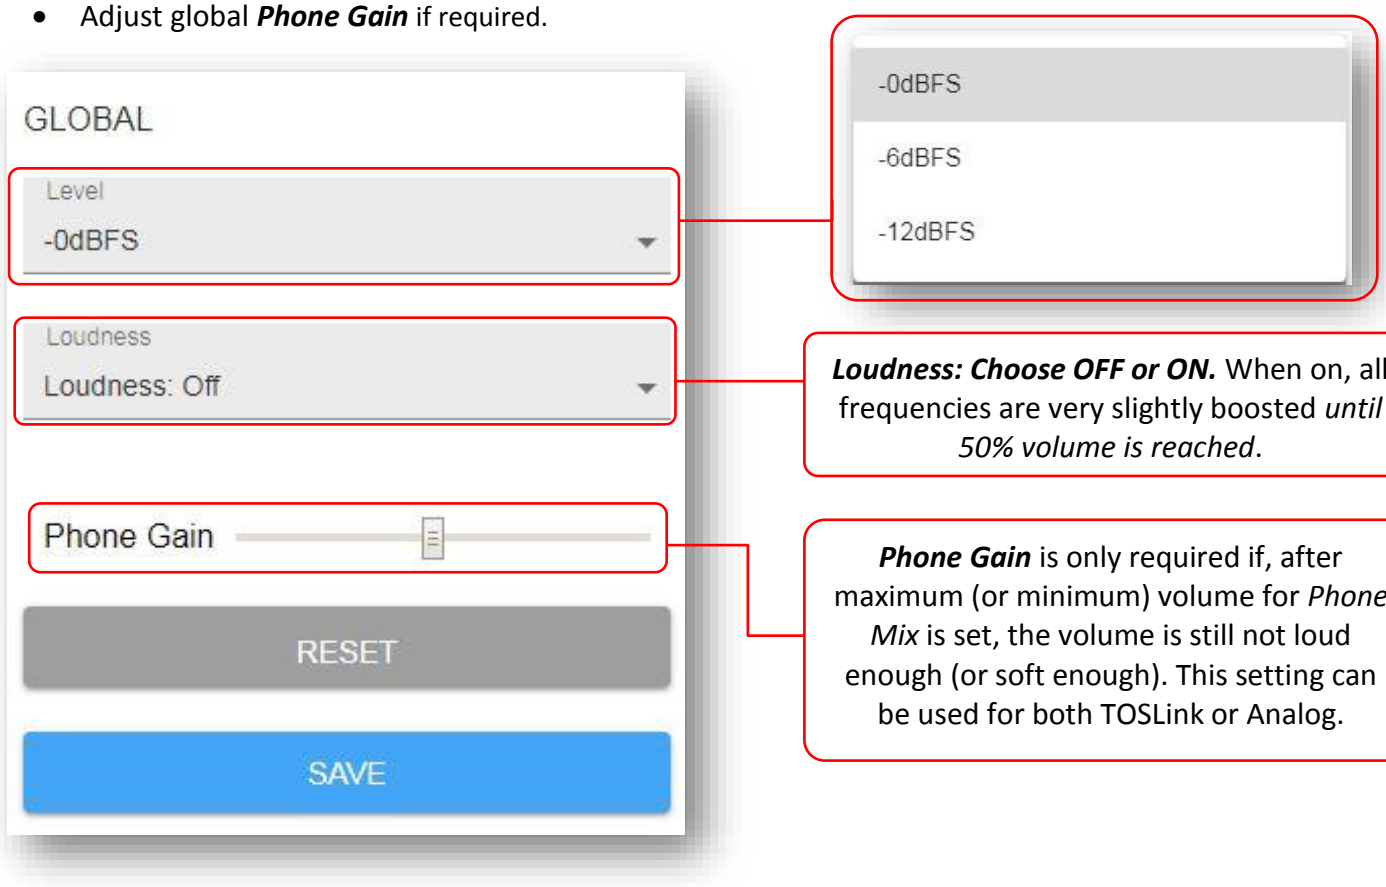

Loudness: Choose OFF or ON. When on, all frequencies are very slightly boosted *until 50% volume is reached*.

Phone Gain is only required if, after maximum (or minimum) volume for *Phone Mix* is set, the volume is still not loud enough (or soft enough). This setting can be used for both TOSLink or Analog.

*Once complete, select **SAVE** to store the settings in the ZEN module.*

A²B® is a registered trademark of Analog Devices Inc.

DSP12A-A2B Time Alignment (Analog only)

- The DSP12A-A2B has a built-in time alignment feature that can be activated on-the-fly, through an OEM menu setting. *To activate the (driver) time alignment, go to* ***Settings, Sound Settings,*** *then choose* ***Sound Mode.*** Choose *Surround* to use driver time alignment.

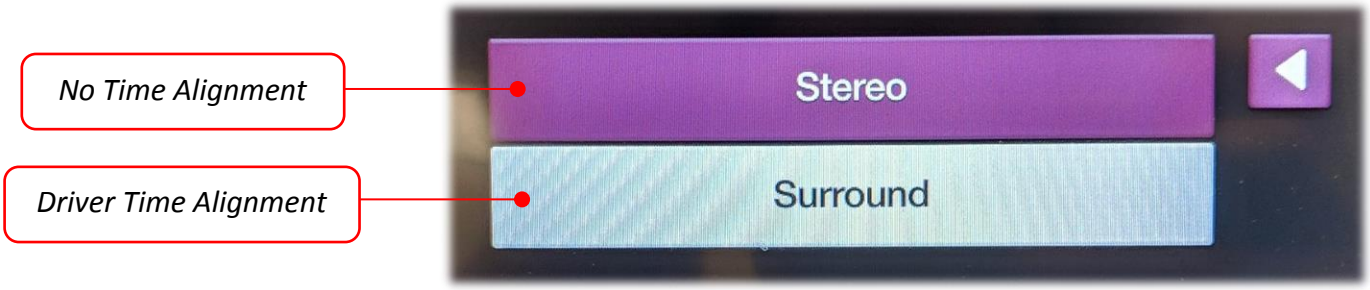

ZEN Updates

Updating the DSP12A-A2B interface is performed using the provided USB cable and an internet-connected PC. Connect the USB cable from the ZEN module to the PC, and with an internet browser go to ***navtvdevice.com***. Once there, let the page load and find the module. The unit will update automatically to the latest software (be patient). If required, you may roll back to a previous software version as well.

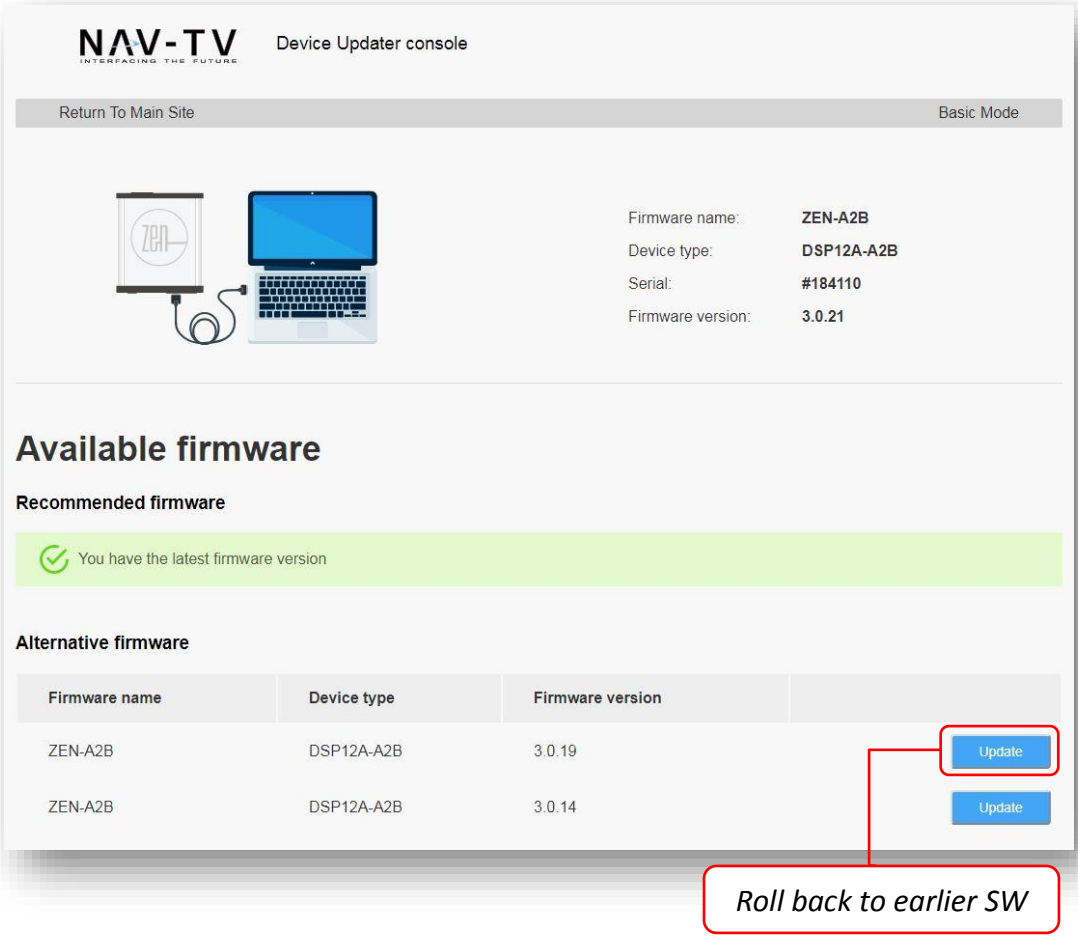

A²B® is a registered trademark of Analog Devices Inc.

DSP12A-A2B Technical Specifications

Hardware & Software	
Current HW version:	-- 3r0 --
Current SW version:	3.0.21 (website updater only)
Compatible SW (update) OS:	Windows 7 (64 bit), 8, 10
INPUT	
Digital Input	A²B Twisted Pair
OUTPUT	
Digital Outputs:	TOSLink
Digital Outputs supported:	24bit/48kHz
Frequency Response (digital):	18Hz – 24kHz
Analog Outputs:	12 channels (RCA)
Output Voltage *Peak:*	6v
Output Voltage *RMS:*	2.1v
Analog Output Type:	Single-Ended
S/N Ratio (analog):	114dB
Frequency Response (analog):	18Hz – 24kHz
THD+N @ -1dBFS	-94dB
DAC	48kHz 32bit
DSP	32bit Floating Point
Delay (Time Alignment)	Selectable
Power Supply	
Current Consumption Stand-by	<1 mA
Current Consumption Operational	350 mA MAX
Operational Voltage	7V – 20V DC
Amp Turn-On Output	Automatic
Amp Turn-On Voltage	V-batt
Amp Turn-On Current Limitation	500mA
Other	
Dimensions:	4”x5”x1 3/8”
Weight:	10 oz
Country of Origin:	USA

Notes

- With A²B, if the power or (A2B) is ever removed from the ZEN module, the vehicle will require a CAN reset once or twice to regain normal OEM functionality (chimes, etc). CAN-reset procedure:
    1. Turning off ignition
    2. Close all doors
    3. Let the vehicle ‘go to sleep’ for ~10 minutes (without touching it)
    4. Return and test

A²B® is a registered trademark of Analog Devices Inc.

NAV-TV

INTERFACING THE FUTURE

A²B® is a registered trademark of Analog Devices Inc.