


# NAV-TV®

*Interfacing the future!*  
interfacing the future!

## OPI-M & OPI-P Installation Instructions

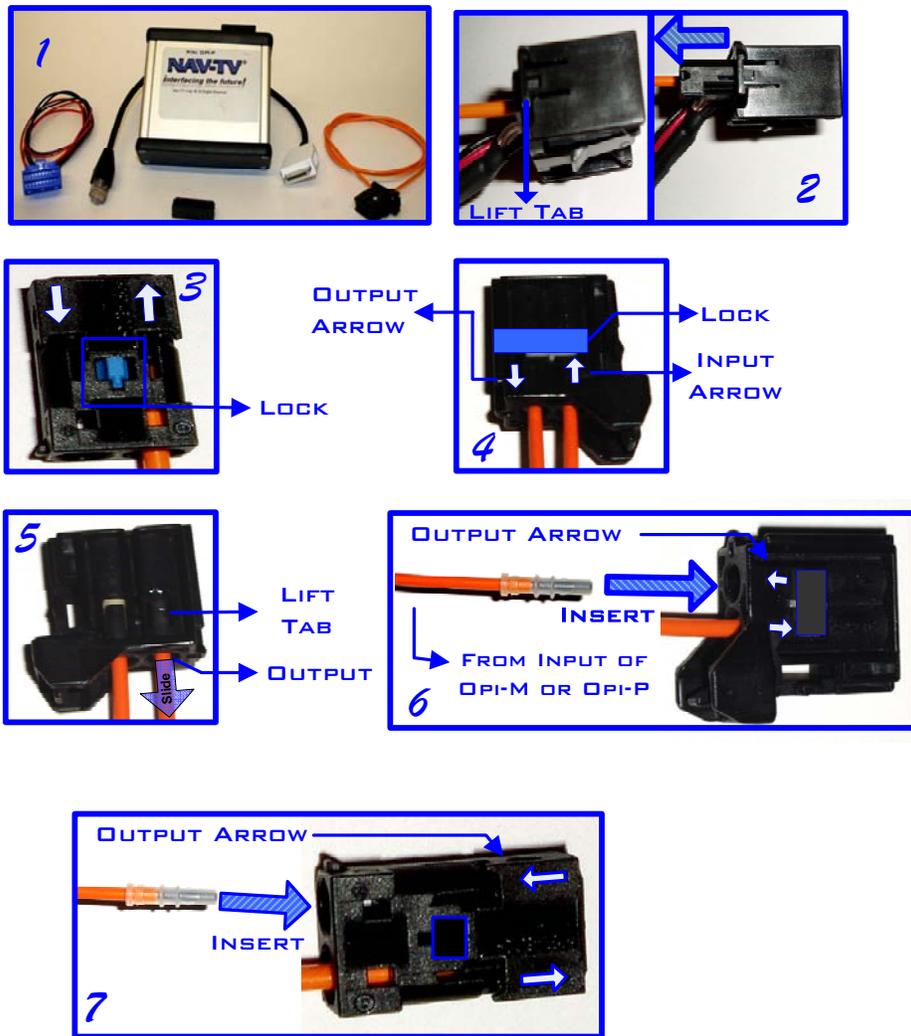

### Installation Steps

**STEP 1:** REMOVE NAVIGATION SCREEN AND RADIO TUNER TO BEGIN INSTALL. UNPLUG SCREEN AND RADIO TUNER AND SET IT ASIDE.

**STEP 2:** USE A PICK TOOL TO LIFT TAB AND GENTLY TUG THE INSERT OUT OF THE OPI-M OR OPI-P PLUG.

**STEP 3:** ON THE OPI-M OR OPI-P OPTICAL PLUG USE A PICK TOOL TO PRESS THE BLUE LOCK DOWN FROM THE SIDE ILLUSTRATED ABOVE AND REMOVE LOCK.

**STEP 4:** ON THE FACTORY OPTICAL PLUG, REPEAT PREVIOUS STEP (REMOVE LOCK).

**STEP 5:** ON THE FACTORY OPTICAL PLUG, LIFT TAB UP TO ALLOW THE FIBER OPTIC LEAD TO SLIDE OUT OF THE FACTORY PLUG ON THE OUTPUT SIDE.



**STEP 6:** ON THE FACTORY OPTICAL PLUG, INSERT OPTICAL LEAD FROM THE INPUT OF THE OPI-M OR OPI-P CONNECTOR INTO THE OUTPUT OF THE FACTORY CONNECTOR ( ↑ TO ↓ ).

**STEP 7:** ON THE OPI-M OR OPI-P OPTICAL PLUG, TAKE THE OPTICAL LEAD THAT YOU'VE JUST REMOVED FROM THE OUTPUT OF THE FACTORY CONNECTOR AND INSERT IT INTO OUTPUT OF THE OPI-M OR OPI-P CONNECTOR.

**STEP 8:** PLUG EVERYTHING BACK IN MAKING SURE THAT ALL OPTICAL LEADS ARE LOCKED INTO PLACE AND THAT THE LOCKS THEMSELVES ARE IN PLACE.

**RED WIRE:** +12 V CONSTANT POWER  
**BLACK WIRE:** GROUND

### Typical Light Flow Of Fiber Optic Loop

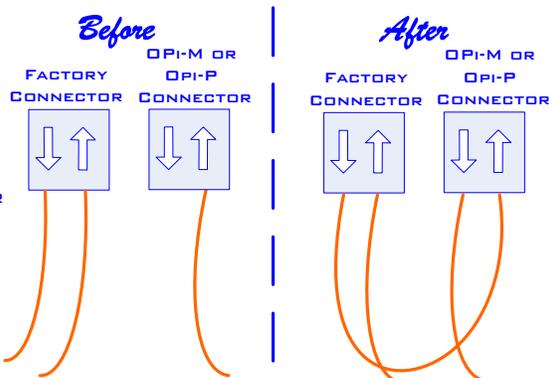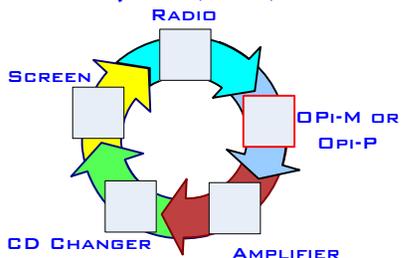


# NAV-TV<sup>®</sup>

*interfacing the future!*

## OPI-M & OPI-P Installation Instructions

### QUICK REFERENCE WIRING DIAGRAM

**BEFORE OPI-P INSTALLATION:**

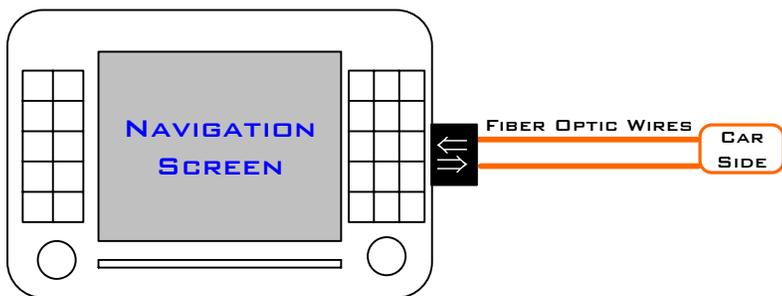

**AFTER OPI-P INSTALLATION:**

