

3950 NW 120th Ave, Coral Springs, FL 33065 TEL 561-955-9770 FAX 561-955-9760

www.nav-tv.com

info@nav-tv.com

BMW12N-DYNAMIC KIT



NTV-KIT717



Overview

The BMW12-N kit interfaces 2 video inputs (including a backup camera) to the factory media screen in select 2012+ BMWs with the 6-pin video connector (at the screen). This interface generates steering-based guidelines while in reverse for added convenience. NOTE: 2017 year 'EVO' touch-screen monitors are NOT compatible with this interface.


Kit Contents







BMW12-N Interface *NTV-INT244*

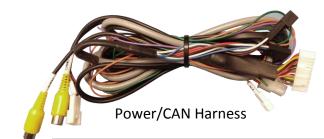




Remote (menu control)



Interface Connectors

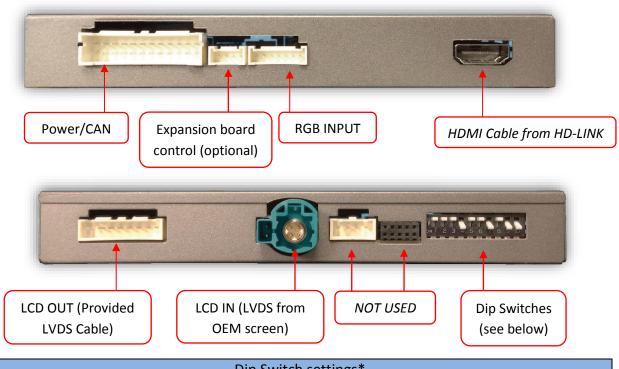

Dip Switch settings*

DS 1-4 are install dependent

	ļ!		,							
Dip SW:	1	2	3	4	5	6	7	8	9	10
UP	KEEP	SKIPS	SKIPS	RVC	CAN	CAN	CAN	HIGH	VEH	KEEP
	UP	V1	V2	OFF	SETTING	SETTING	SETTING	RES	SETTING	DOWN
DOWN	KEEP	ENABLES	ENABLES	RVC	CAN	CAN	CAN	LOW	VEH	KEEP
	UP	V1	V2	ON	SETTING	SETTING	SETTING	RES	SETTING	DOWN

Known Dip Switch Configuration (note: if 5 & 6 are not shown, leave UP)



I











2013: 1 & 3 series 8.8" screen

6.5" screen

2014: 1 & 3 series 2014+: 3, 5, 7 series 10.2" screen

2014: MINI 8.8" screen

2015: MINI 6.5" screen

2015+: X or 4-series 8.8", 10.2" screen



NOTE: reset power after adjusting dip switches.



2016: 3-series 6.5" screen



'13-'15: X-3 & 3series 6.5" screen


BMW12-N Interface Installation (5 Series example)

- 1. The BMW12-N intercepts *two OEM harnesses in two locations:* the iDrive knob and the screen. You must gain access to both places for proper installation.
 - a. Access the rear of the screen by removing the dashboard panel (clips only) and then removing (2x) Torx T20 screws securing the screen to the sub-dash.





2. To access the iDrive harness, remove the panel surrounding it (may have Torx screw securing to sub dash)

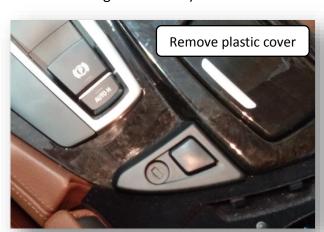





- 3. Lift up the lower dash panel and disconnect 4-PIN plug powering the iDrive knob.
- 4. Connect provided 4-PIN T-Harness in between iDrive knob and OEM harness as shown.



4. Replace the lower dash panel (with iDrive knob) back to sub-dash.

5. Disconnect the OEM screen LVDS video cable and connect it to the port on the BMW12-N

labeled 'LCD-IN'.



6. Connect the provided *LVDS Video Cable* to the port on the BMW12-N labeled *'LCD-OUT'* and the other end back to the screen.

- 7. Install and run the reverse camera video source power and signal to the BMW12-N interface location and connect to the RCA labeled *'CAMERA'*. *Power your camera with an ACC source (cigarette lighter)* or use the *violet wire to trigger a relay* for reverse 12v (+) only. *NOTE: using the purple wire directly to power your camera is not recommended by NAV-TV due to potential current issues (iDRIVE power has only 3 amp fuse).*
- 8. *Optional:* If installing a secondary camera or AUX video source, connect signal RCA to the RCA on the BMW12-N interface labeled 'AVIN'.
- 7. After DIP switch settings have been set (see page 2), connect the 24-PIN power connector to the BMW12-N interface labeled 'POWER CAN'. Proceed to **Menu Options** section if necessary (front camera settings, etc) or to **BMW12-N Operation**.




Menu Adjustments

Before you start:

- The IR-Eye must be connected
- Make sure the car's ignition is on and radio is on
- You must be in Reverse Camera mode OR AUX Video mode (see below):
 - Reverse Camera Mode adjusts Reverse Camera Settings
 - AUX Video Mode adjusts AUX Video Settings
- Press the OK BUTTON 4 times (numbers will display per press), then press POWER.
- The OSD Menu will appear on screen (auto-time out in about 5 seconds if no action occurs).



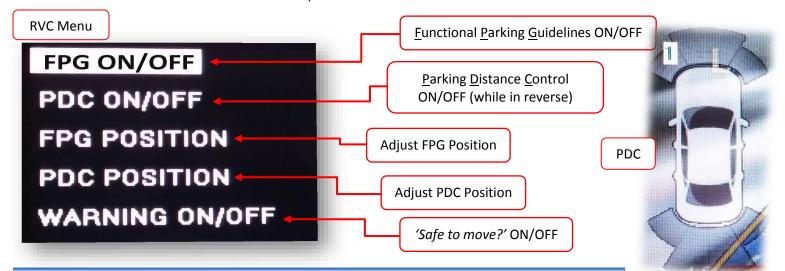

NAVI AV SET INFO FRON CAM OEM FCAM VIDEO-ADJ NAVI AV SET INFO AV1-SEL AV2-SEL AV3-SEL AV3-DSP AV3-DSP

AUX

VIDEO

Menu

If adding a front camera OR Aux Video source:

- 1. Disconnect POWER/CAN Harness from interface
- 2. Place DIP SWITCH 1 in the DOWN position, reconnect power
- 3. Press and hold the iDRIVE knob 'MENU' to activate the AUX screen
- 4. Press **OK** button on remote 4 times, then press **POWER**

SET – FRON CAM must be turned on if adding a *front camera* **and the user wishes for automatic front camera switching.** Options for 5, 7, 9 or 11 seconds are user-selectable for the length of time the front camera input stays active once the vehicle is placed out of reverse.

If the user wants only an AUX video input without front camera, set AV1-SEL to ON

Once finished with settings, place DIP SWITCH 1 back into the **UP position** and reset power to interface.

Adding HD-LINK Adapter (HDMI Input)

Follow the instructions below when adding the HDMI adapter (HD-LINK) to enable HDMI input to the OEM screen:



- 1. Put dip switch #1 in the **DOWN** position.
- 2. Activate the 'NAV INPUT' by *holding* the 'MENU' button on the iDRIVE knob.
- 3. Once 'NAV INPUT' shows on the screen, on the remote press the **OK BUTTON** 4 times, then press **POWER**.
- 4. Navigate to the 'NAVI' section.
 - a. Select 'HDMI-SEL'
 - b. Choose 'HD95E'
 - c. Press *MODE* on the remote to return and exit the OSD menu (or let it time out).
- 5. Replace dip switch #1 to the **UP** position.
- Connect the *black wire* to ground (-) and the *red wire* to ACC power
 (+) from the main power connector on the *HD-LINK* adapter. The RCA's on this plug provide audio from the HDMI source.






Green Trigger wire setup

This module includes a green *input* wire for analog triggering of either the Reverse camera input or the 'AVIN' input (yellow RCAs), selectable through the AV menu. This allows for adding multiple cameras through the use of an SVS-6 switcher, etc. Follow the steps below adjust this feature. *NOTE: by default, the green wire will trigger the Reverse camera input RCA*.

- 1. Put dip switch #1 in the **DOWN** position. When this section is complete, return switch #1 **UP**.
- Activate the 'NAV INPUT' by holding the 'MENU' button on the iDRIVE knob.
- 3. Once 'NAV INPUT' shows on the screen, on the remote press the **OK BUTTON** <u>4 times</u>, then press **POWER**.
- 4. Navigate to the 'SET' section.
 - Select 'REVERSE WIRE'
 - Choose 'AV1', 'REAR' or 'REAR MODE' (explanations below)
 - Press MODE on the remote to return and exit the OSD menu (or let it time out).
 - Test by sending temporary power (12v +) to the *green wire* labeled *reverse*.





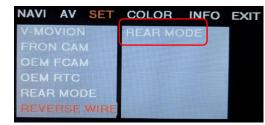

AV1 shows the 'AVIN' RCA when the green reverse wire is triggered.

REAR shows the 'CAMERA' RCA (with no lines) when the green reverse wire is triggered.

REAR MODE shows the 'CAMERA' RCA (with dynamic lines) when the green reverse wire is triggered.

Agreement: End user agrees to use this promisuse of its product. If you do not agree, please uscontinue use immediately and return product to plaintended for off-road use and passenger entertainment only.

BMW12-N Installation Diagram To Screen From OEM screen cable RCA OUTPUT Video Expansion Board Power/CAN Harness Optional camera trigger input (selectable **Optional Accessory** RCA INPUT * x3 through menu) Intercept OEM T-Harness iDRIVE knob power harness From OEM (4-PIN) for Reverse trigger harness IR Eye [power & CAN output 12v(+) data Reverse Camera AUX/Front Camera 4-PIN clear connector

NOT USED

BMW12-N Operation

- Once all connections are made and dip switches are set properly, placing the vehicle in reverse will display the connected camera with dynamic guidelines for convenience.
- Additionally, see below for AUX/Front camera activation using factory buttons.

