BHM 03/01/2018 NTV-DOC310




www.nav-tv.com info@nav-tv.com






The MFT CAM-Retention harness connects into the factory harness (previously connected to the OEM screen) and retains the OEM reverse camera when adding an aftermarket head unit to the Ford/Lincoln vehicle.

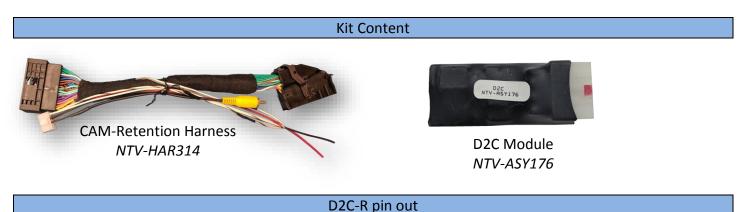

Pin #	Description	Color
1	DIFF (+) IN	Yellow
2	IGNITION/ACC 12v (+) IN	Yellow
3	Composite Video OUT	Red
4	NOT USED	
5	DIFF (-) IN	Blue
6	Ground (-)	Black
7	Composite Shield	Gray
8	NOT USED	

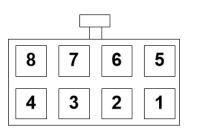





**Agreement:** End user agrees to use this product in compliance with all State and Federal laws. NAV-TV Corp. would not be held liable for misuse of its product. If you do not agree, please discontinue use immediately and return product to place of purchase. This product is intended for off-road use and passenger entertainment only.

- 1. Remove the factory radio.
- 2. Connect the provided T-Harness to the OEM monitor harness.
- 3. Connect the *black wire* to chassis ground (-). Connect the *red wire* to an ACC 12v (+) source.
- 4. Connect the male RCA to the *rear camera signal input RCA* on the aftermarket radio.

Once complete, the factory camera will be converted from differential to standard composite video which the aftermarket radio will recognize.