BHM 06/22/18 NTV-DOC278



3950 NW 120th Ave, Coral Springs, FL 33065 TEL 561-955-9770 FAX 561-955-9760

www.nav-tv.com

info@nav-tv.com

BMW12N-H

NTV-KIT791







Overview

The BMW12N-H kit interfaces 2 composite video inputs & HDMI input to the factory media screen in select 2012+ BMWs with the 6-pin video connector (at the screen). This interface generates steering-based guidelines while in reverse for added convenience.

NOTE: 2017 year 'EVO' touch-screen monitors are **NOT compatible** with this interface.

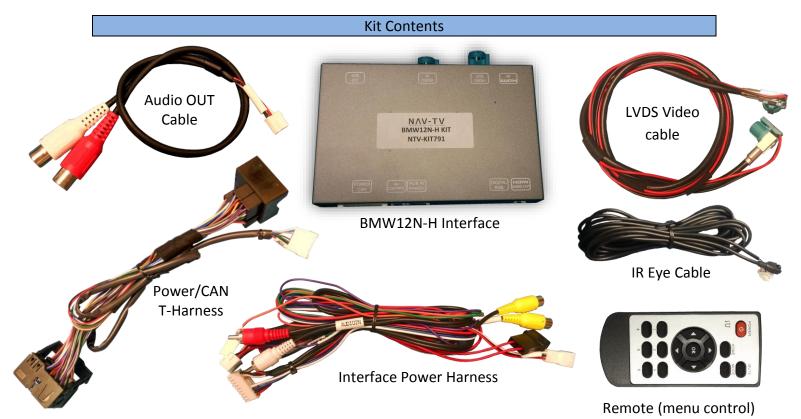

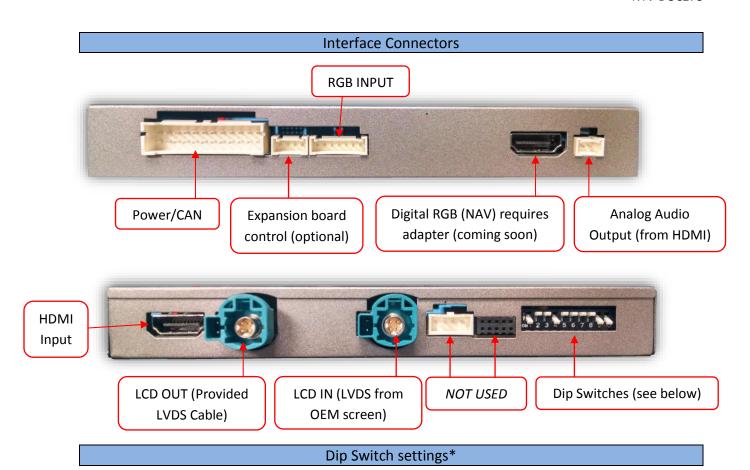

Dip SW:	1	2	3	4	5	6	7	8	9	10
UP	KEEP	SKIPS	SKIPS	RVC	CAN	CAN	CAN	HIGH	VEH	KEEP
	UP	V1	V2	OFF	SETTING	SETTING	SETTING	RES	SETTING	DOWN
DOWN	KEEP	ENABLES	ENABLES	RVC	CAN	CAN	CAN	LOW	VEH	KEEP
	UP	V1	V2	ON	SETTING	SETTING	SETTING	RES	SETTING	DOWN





2013: 1 & 3 series 8.8" screen



2014: 1 series 6.5" screen



2014+: 3, 5, 7 series 10.2" screen



2014: MINI 8.8" screen



2015: MINI 6.5" screen




2015: X-series 8.8", 10.2" screen



*Note: after adjusting Dip Switches, you must disconnect and reconnect power to the interface or the change will not be implemented.



2016: 3-series 6.5" screen

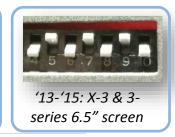

BMW12N-H Interface Installation (5 Series example)

- 1. The BMW12-N intercepts **two OEM harnesses in two locations:** the main radio quadlock connector and the screen. You must gain access to both places for proper installation.
- Access the rear of the screen by removing the dashboard panel (clips only) and then removing (2x) Torx T20 screws securing the screen to the sub-dash.





 Disconnect the OEM screen LVDS video cable and connect it to the port on the BMW12-N labeled 'LCD-IN'.

3. Connect the provided LVDS Video Cable to the port on the BMW12-N labeled 'LCD-OUT' and the other end back to the screen.



- 4. To access the radio harness, remove the dash panel which sits in front on the radio stack (disc player), then remove and Torx screws securing the radio to the sub-dash. Pull the radio straight out and locate the quad-lock connector.
 - a. Connect the provided Plug & Play T-Harness between the radio and the OEM harness. Be certain to move the fiber optics (if equipped) from the OEM harness to the front of the T-Harness.





 Connect the provided *Interface Power Harness* to the provided *T-Harness* via the white 10-pin connector.



6. Connect your HDMI cable from the HDMI source to the port on the interface labeled 'HDMI IN'.




- a. Use the provided **Audio OUT Cable**for HDMI source audio out. NOTE: connecting these white/red RCAs to the
 'AUDIO IN' RCAs located among the **Interface Power Harness** will result in audio playback when 'AUX' is selected via the OEM BMW system.
- 7. Install and run the reverse camera video source power and signal to the BMW12N-H interface location and connect to the RCA labeled 'CAMERA'. Power your camera with an ACC source or use the **violet wire** for reverse 12v (+) only. NOTE: this wire outputs 500 mA MAX do not use to supply power to more than 1 camera. Use this wire to trigger a relay if you're concerned with current supply.
- 8. **Optional:** If installing a secondary camera or AUX video source, connect signal RCA to the RCA on the BMW12N-H interface labeled 'AVIN'.
- 9. After DIP switch settings have been set (see page 2), connect the 24-PIN power connector to the BMW12 interface labeled 'POWER CAN'. Proceed to **Menu Options** section if necessary (front camera settings, etc) or to **BMW12N-H Operation**.



If you'd rather hard-wire this harness to the vehicle manually (or having issues with Plug & Play T-Harness), Cut the 10-pin connector (step 5) off of the provided Power harness and connect the following to the *main OEM power connector:*

- Black (ground) to PIN 12 (-)
- Red (power) to PIN 15 (+)
- Blue (CAN HI) to PIN 11 (CAN HI)
- White (CAN LOW) to PIN 9 (CAN LO)

Wire Side

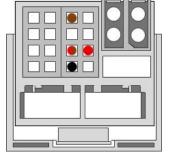


Menu Adjustments

Before you start:

- The IR-Eye must be connected
- Make sure the car's ignition is on and radio is on
- You must be in Reverse Camera mode OR AUX Video mode (see below):
 - Reverse Camera Mode adjusts Reverse Camera Settings
 - AUX Video Mode adjusts AUX Video Settings
- Press the OK BUTTON 4 times (numbers will display per press), then press POWER.
- The OSD Menu will appear on screen (auto-time out in about 5 seconds if no action occurs).



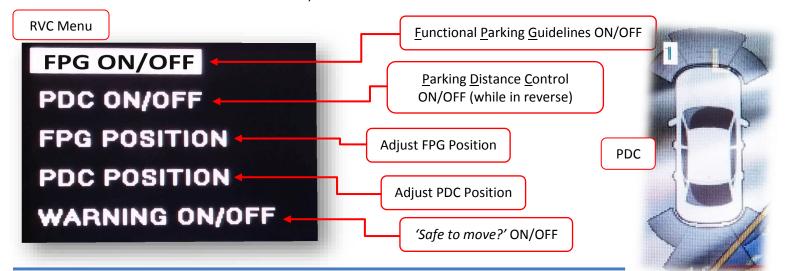

NAVI AV SET INFO FRON CAM OEM FCAM VIDEO-ADJ NAVI AV SET INFO AV1-SEL AV2-SEL AV3-SEL AV3-DSP AV3-DSP

AUX

VIDEO

Menu

If adding a front camera OR Aux Video source:

- 1. Disconnect POWER/CAN Harness from interface
- 2. Place DIP SWITCH 1 in the DOWN position, reconnect power
- 3. Press and hold the iDRIVE knob 'MENU' to activate the AUX screen
- 4. Press **OK** button on remote 4 times, then press **POWER**

SET – FRON CAM must be turned on if adding a *front camera* **and the user wishes for automatic front camera switching.** Options for 5, 7, 9 or 11 seconds are user-selectable for the length of time the front camera input stays active once the vehicle is placed out of reverse.

If the user wants only an AUX video input without front camera, set AV1-SEL to ON

Once finished with settings, place DIP SWITCH 1 back into the **UP position** and reset power to interface.

HDMI Setup

In order to use the HDMI feature of this kit, it must be setup via the OSD menu first.



- Put dip switch #1 in the **DOWN** position.
- Activate the 'NAV INPUT' by holding the *HOME* button on the iDRIVE knob controller.
- Once 'NAV INPUT' shows on the screen, on the remote press the OK BUTTON 4 times, then press POWER.
- 4. Navigate to the 'NAVI' section.
 - a. Select 'HDMI-SEL'
 - b. Choose 'HD95'
 - c. Press *MODE* on the remote to return
- 5. Navigate to the 'AV' section.
 - a. Select 'AV1-SEL'
 - b. Choose 'HDMI'
- 6. If the user desires *front camera timer*, set it up now through *'FRON CAM'* under *'SET'* and choose timer length. If adding front camera and no timer is desired, use DIP SWITCH #2 instead (only).
- Replace dip switch #1 to the *UP* position.





Green Trigger wire setup

This module includes a green *input* wire for analog triggering of either the Reverse camera input or the 'AVIN' input (yellow RCAs), selectable through the AV menu. This allows for adding multiple cameras through the use of an SVS-6 switcher, etc. Follow the steps below adjust this feature. *NOTE: by default, the green wire will trigger the Reverse camera input RCA.*

- 1. Put dip switch #1 in the **DOWN** position. When this section is complete, return switch #1 **UP**.
- 2. Activate the 'NAV INPUT' by *holding* the 'MENU' button on the iDRIVE knob.
- 3. Once 'NAV INPUT' shows on the screen, on the remote press the **OK BUTTON** <u>4 times</u>, then press **POWER**.
- 4. Navigate to the 'SET' section.
 - Select 'REVERSE WIRE'
 - Choose 'AV1', 'REAR' or 'REAR MODE' (explanations below)
 - Press MODE on the remote to return and exit the OSD menu (or let it time out).
 - Test by sending temporary power (12v +) to the green wire labeled reverse.



AV1 shows the 'AVIN' RCA when the green reverse wire is triggered.




REAR shows the 'CAMERA' RCA (with no lines) when the green reverse wire is triggered.



REAR MODE shows the 'CAMERA' RCA (with dynamic lines) when the green reverse wire is triggered.

BMW12N-H Installation Diagram

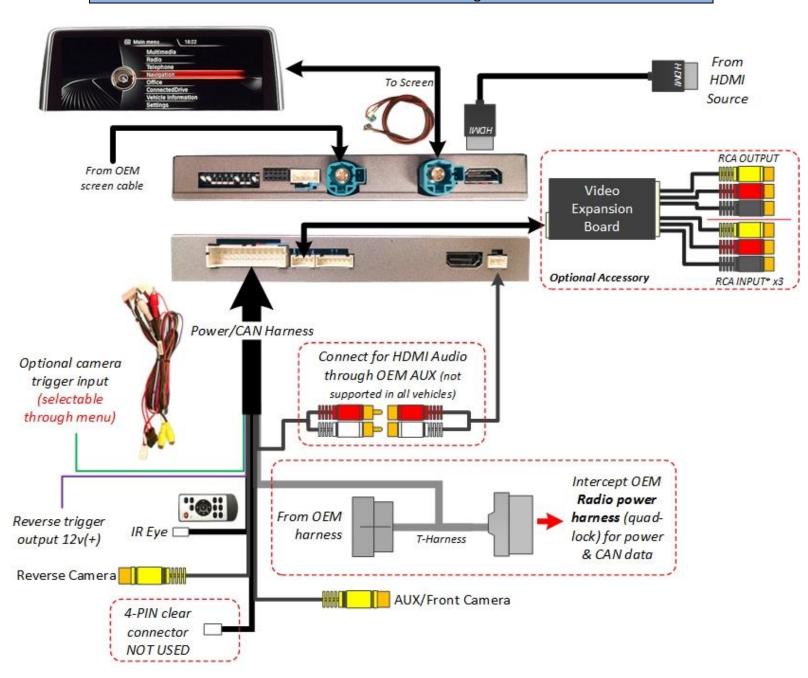

BMW12N-H Operation

- Once all connections are made and dip switches are set properly, placing the vehicle in reverse will display the connected camera with dynamic guidelines for convenience.
- Additionally, see below for AUX/HDMI/Front camera activation using factory buttons.

